
LOTUS STONE


HEIGHT X WIDTH X LENGTH		PIECES COUNT	
cm	in.	/sq. ft	/m²
2 x 12-15 x 17-25	5 x 30-38 x 43-63	0,11	1,15



Lotus stones are palletized in rows of six different model stones. An exact arrangement of the stones relative to one another must be strictly observed during installation. Markers on the sides of the Lotus stones help place them properly. There are two types of markers:

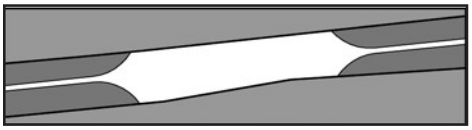

Large markers, which may be single or double, must be aligned one next to each other.

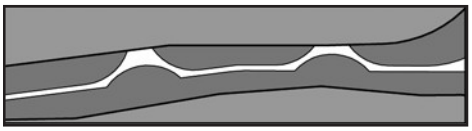


Narrow markers, which may be single, double or triple. These are of a semi-cylindrical male-female type. Male markers must be aligned with female markers having the same number of grooves.


Preliminary Steps for Installation


Begin by preparing the base and bedding sand according to the recommendations in the Bolduc Products Installation Guide.


Step 1

Install an first Lotus stone, preferably along one of the edges of the area to be paved. Identify the type (large or narrow) and the number of markers (1, 2 or 3) on its side. The stone illustrated in Figure 1 has double narrow female markers.

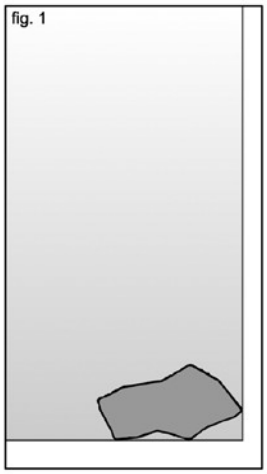

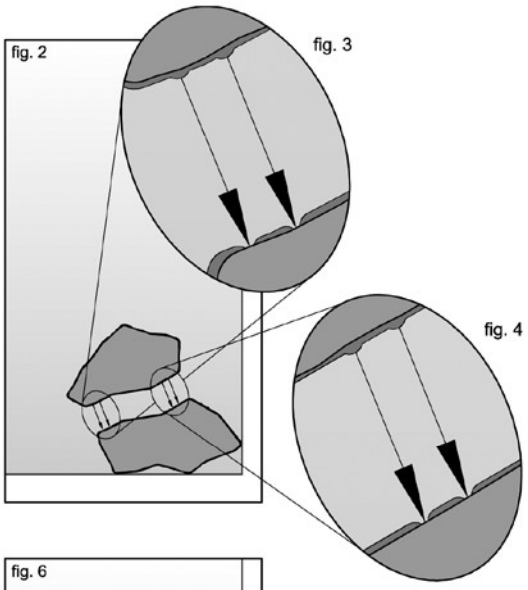

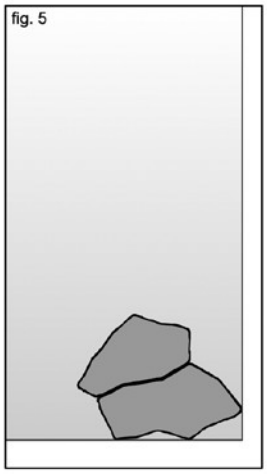

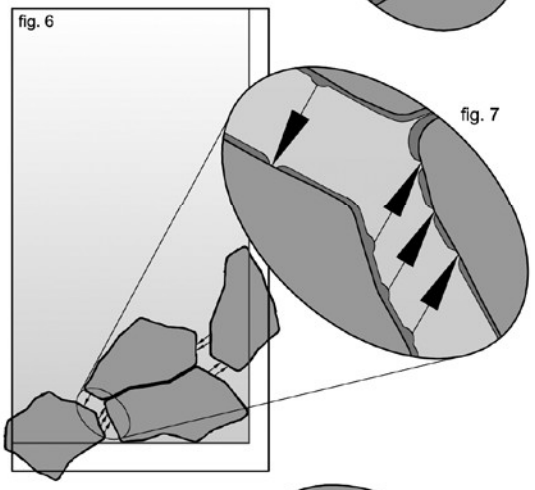

Step 2


On the pallet, pick up a stone with markers that will fit with those of the first stone. In the example, you would be seeking for a stone with double narrow male markers (Figures 2, 3 and 4).

Step 3

Continue installing following the same principle. Identify the type of markers on the stones in Figure 5. Then select the next stones to be installed according to these markers (Figures 6 and 7). Figure 7 shows a close-up of an assembly of single narrow female-male markers and a triplet of narrow male-female markers.

Step 4

Continue the installation (Figure 8). Figure 9 shows a close-up of an assembly of single large markers.

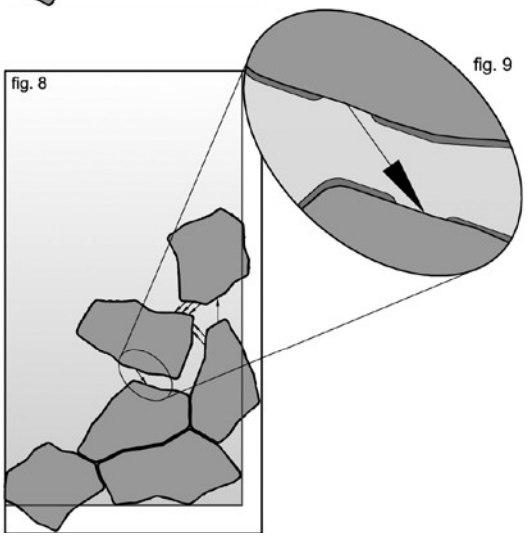

Final steps

Once the paving area is filled, begin sawing stones along the edges (optional) and install the edges restraint or the curbs . Fill joints according to the recommendations in the Bolduc Products Installation Guide.